



# **RAD**<sup>®</sup>

**TORQUE SYSTEMS - INNOVATION DRIVEN PERFORMANCE**

## **USER MANUAL**

### **PNEUMATIC SERIES**

**35 - 15.000 Nm**



**User manual for:**

- **100 SL**
- **275 SL**
- **475 SL(-2)**
- **10 GX**
- **14 GX(-2)**
- **20 DX(-2)**
- **34 GX(-2)**
- **40 GX(-2)**
- **46 GX**
- **70 DX**
- **80 DX**
- **110 DX**
- **150 DX**



## Table Of Contents

<b>1. General instructions</b>	<b>3</b>
<b>2. Assembly</b>	<b>3</b>
<b>3. Air pressure regulator</b>	<b>4</b>
3.1 1/2" NPT inlet	4
3.2 1/2" NPT outlet	4
3.3 Automatic oiler	4
<b>4. Setting torque</b>	<b>5</b>
<b>5. Movement of the reaction arm</b>	<b>5</b>
5.1 Installing the reaction arm	5
5.2 Reaction arm height	6
5.3 Reaction arm foot	6
5.4 Reaction point	6
<b>6. Safety</b>	<b>6</b>
<b>7. ATEX certification</b>	<b>7</b>
<b>8. Warranty</b>	<b>8</b>
8.1 New tool warranty	8
8.2 Repaired tool warranty	8
<b>9. Contact</b>	<b>8</b>



## 1. General instructions

**NOTE:** Do not operate the tool before reading these instructions. If breakdown, malfunction or damage occurs, do not attempt to repair, please contact RAD Torque Systems B.V. immediately. When working in an explosive environment; Always make sure you use an ATEX certified torque wrench. This is indicated by the Ex marks on the torque wrench and FRL unit and the green earth cable with clamp on the FRL unit.

RAD pneumatic torque wrenches are reversible, non-impacting, torque controlled tightening tools and must always be operated with the following:


- Clean dry air supply (air consumption can be found on page 4)
- Cage assembly with lubricator and regulator
- Impact sockets with locking pin and o-ring
- Proper reaction arm with retaining ring

These torque wrenches contain metal components which can be dangerous if the torque wrench and FRL unit are not ATEX proof.

## 2. Assembly

1. Blow out hoses before connecting
- 1a. When ATEX certified; make sure that the original RAD hose is used between the torque wrench and the FRL unit
- 1b. When ATEX certified; first connect the clamp of the earth cable (green color mounted to the FRL unit) to the workpiece
- 1c. When used in areas with dust explosion risks, install the silencer to the air outlet of the torque wrench to limit dust whirling. Preferably, clear the environment of dust within a radius of 1 meter around the workplace before operating
2. Connect the wrench air inlet to the outlet side of the Cage Assembly, observing airflow direction
3. Connect air supply to inlet side of the Cage Assembly using a minimum hose size of 1/2" (1.27cm)
4. Check oil level in lubricator and fill to correct level
5. Fasten and secure the reaction arm on the jagged side of the gearbox with the retaining ring
6. When ATEX certified; after placing the socket, secure the socket with a pin and o-ring lock to prevent loosening of the socket.

### Regulator cage setup

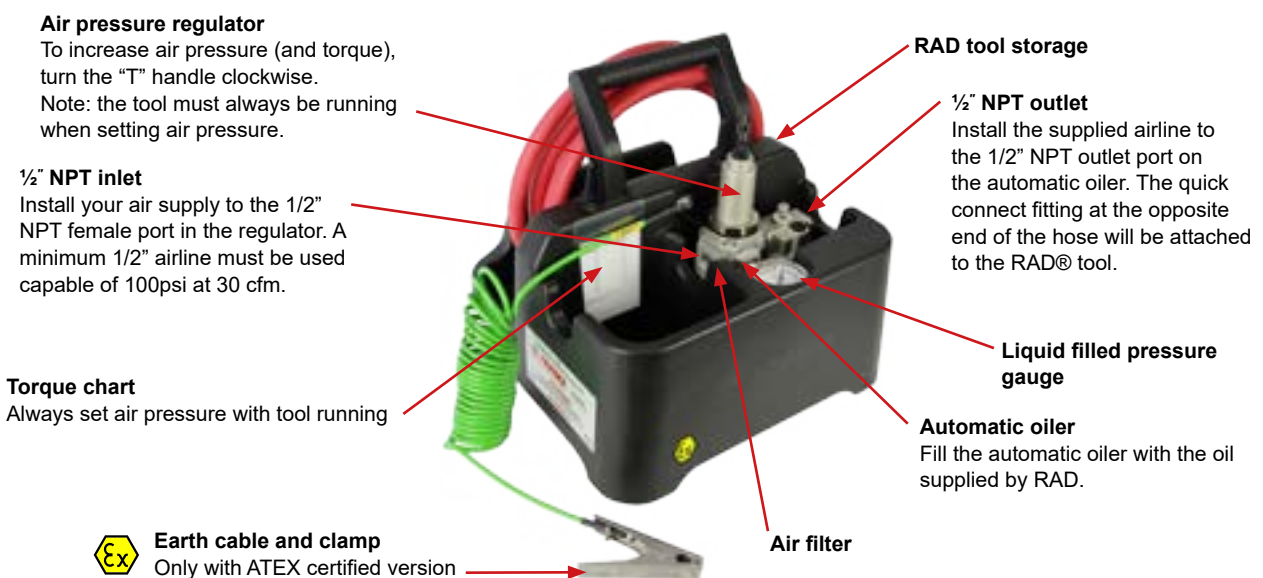

**WARNING!** Always check all air hose connections before the air supply is activated.

When the tool is in operation the reaction arm rotates in the opposite direction to the output square drive and must be allowed to rest squarely against a solid object or surface adjacent to the bolt to be tightened.

**WARNING!** Always keep hands clear of the reaction arm when the tool is in use or serious injury could result.

### 3. Air pressure regulator

Rotate clockwise to increase the air supply, and counter-clockwise to decrease the air supply. Note: the torque wrench should run freely while setting the torque. The direction is not important.

#### 3.1 ½" NPT inlet

Connect your air supply to the ½" NPT inlet. The diameter of the hose should be at least ½ ".

#### 3.2 ½" NPT outlet

Connect the supplied air hose to the ½" NPT outlet automatic oiler. The outlet on the other end of the hose is attached to the torque wrench.

**NOTE:** The water tank from the filter outlet should be emptied periodically. The drain filter is accessible from the bottom of the FRL unit.

#### 3.3 Automatic oiler

Fill the oiler with oil only for air tools.

**NOTE:** Ensure a sufficient compressor capacity in terms of volume and pressure.

Air motor	Torque wrench	Air consumption
NPW 120	100 SL	792 Liter at 6,7 bar per minute
	275 SL (-2)	
	475 SL (-2)	
	10 GX	
	14 GX (-2)	
NPW 180	20 DX (-2)	1130 Liter at 6,7 bar per minute
	34 GX (-2)	
	40 DX (-2)	
NWP 200	46 GX	1727 Liter at 6,7 bar per minute
	70 DX	
	80 DX	
	110 DX	
	150 DX	

## 4. Setting torque

Every RAD torque wrench is supplied with a torque chart which relates torque output to air pressure.

### Set the torque as follows:

1. Establish the air pressure required using the torque chart provided with the tool
2. Adjust the regulator until the correct pressure is shown on the gauge
3. The wrench must be free running while adjusting the air pressure to give the correct setting.

### Set the oiler as follows

1. Close the oiler.
2. Set the manometer at 6 bar while the torque wrench runs without resistance.
3. Depending on the size of the torque wrench, the number of oil drops is as follows:

Wrenches up to 2.000 Nm:	Turn the oiler 1.5 turns for one drop per second.
Wrenches from 2.000 till 3.400 Nm:	Turn the oiler 2 turns for 2 drop per second.
Wrenches from 3.400 till 15.000 Nm:	Turn the oiler 2.5 turns for 3 drop per second.

**WARNING:** Exceeding the maximum air pressure will overload the wrench and may cause serious damage. When removing the torque wrench from the bolt connection, the direction switch must be set on "reverse". Then, the maximum torque need to be chosen.

**WARNING:** Before the first use, or after a long period of time without using the wrench, RAD advises to add 5 drops of oil through the quick connect fitting on the wrench.

### Operating the torque wrench:

1. Fit the wrench with the correct size impact socket to suit the bolt to be tightened.
2. Check that the Forward/Reverse switch is set correctly.
3. Rotate the handle to a convenient position relative to the reaction arm.
4. Fit the tool onto the bolt to be tightened with the reaction arm adjacent to the reaction point.
5. Squeeze the trigger partially to bring the reaction arm into contact with the reaction point.
6. Fully depress Trigger and keep fully depressed until wrench stalls. If the Trigger is released before the wrench stalls, full torque will not be applied to the bolt.
7. Release Trigger and remove the tool from bolt.

## 5. Movement of the reaction arm

### 5.1 Installing the reaction arm

Ensure the reaction arm and retaining ring are installed securely to hold the reaction arm in place. Make sure the reaction arm is in contact with a solid reaction point before you operate the tool. When the tool is in operation the reaction arm rotates in the opposite direction to the output square drive and must be allowed to rest squarely against a solid object or surface adjacent to the bolt to be tightened (Figure 1).

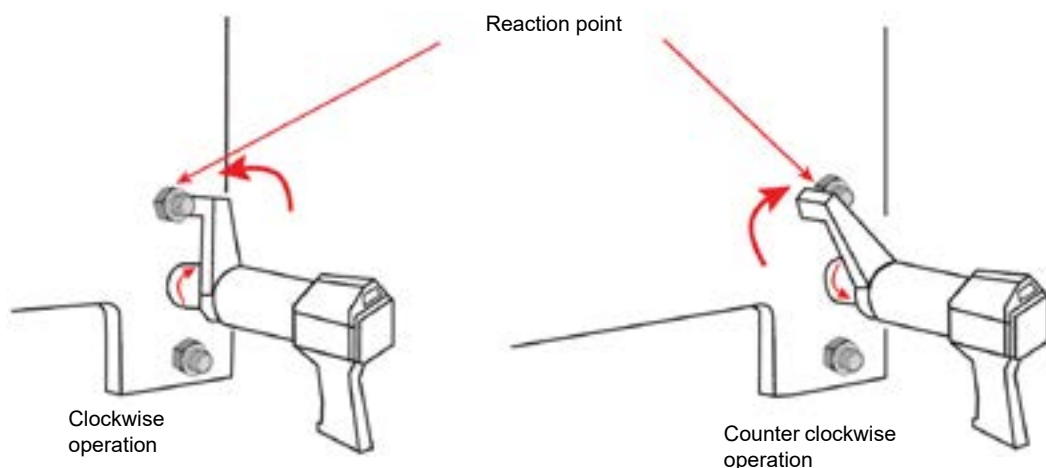


Figure 1



**WARNING:** In use, this tool must be supported at all times in order to prevent unexpected release in the event of a fastener or component failure!

### 5.2 Reaction arm height

Ensure the height of the socket is even with the height of the reaction arm as seen below in Figure 2A. The height of the socket cannot be shorter or higher than the height of the reaction arm as seen below in Figure 2B and 2C.



Figure 2A



Figure 2B



Figure 2C

**NOTE:** Improper reaction will void warranty and can cause premature tool failure.

### 5.3 Reaction arm foot

Ensure the foot of the reaction arm aligns with the length of the nut as seen in Figure 3A. The length of the foot cannot be shorter or longer than the nut as seen in Figure 3B and 3C.



Figure 3A



Figure 3B



Figure 3C

### 5.4 Reaction point

Ensure the reaction arm reacts off the middle of the foot as seen in Figure 4A. Do not react off the heel of the reaction foot as seen in Figure 4B.

Please contact RAD Torque Systems B.V. or your local RAD authorized distributor for custom reaction arms.

**WARNING:** Always keep your hand and body parts clear of the reaction arm and barrel when the tool is in operation (Figure 4C).



Figure 4A



Figure 4B



Figure 4C

## 6. Safety

RAD tools use pressurized air to develop very large forces to tighten and loosen threaded fasteners. For your safety and that of others, warning labels and attention labels are prominently attached to the carrying cages, reaction accessories, and tools.

**NOTE:** Make sure you observe the directions on the warning labels at all times.

RAD tools have been designed with safety in mind however, as with all tools you must observe all general workshop safety practices, and specifically the following:


- Before using your new tool, get familiar with all its accessories and how they work
- Always wear safety goggles when the tool is in operation
- When working in an explosive environment, always be sure you use an ATEX certified torque wrench
- Make sure the reaction arm is in contact with a solid contact point before you operate the tool
- Keep your body parts clear of the reaction arm and the contact point
- Set your air pressure while the tool is running
- Refer to the enclosed torque chart to set the correct air pressure regulator setting for a required torque
- Never exceed the maximum air pressure shown on the torque chart
- Always use the regulator and oiler that is supplied. Failure to do this voids the warranty and can place you in danger
- Be sure to use a minimum 1/2" airline to the cage assembly as this will allow for adequate air flow
- Make sure the reaction arm snap ring is securely in place to hold the reaction arm or blank in place.

RAD tools are safe and reliable. Not following precautions and instructions outlined here can result in injury to you and your fellow workers. New world technologies incorporated is not responsible for any such injury.

## 7. ATEX certification

As option, RAD torque wrenches are available with ATEX certification. The applied RAD ATEX certification is explained below. See our website for more information: [www.radtorque.nl/atex](http://www.radtorque.nl/atex).

The RAD torque wrenches are marked according to ATEX 95 and suitable for use in zone 1, 2, 21 and 22 with explosion group IIA and IIB or dust group IIIA and IIIB.

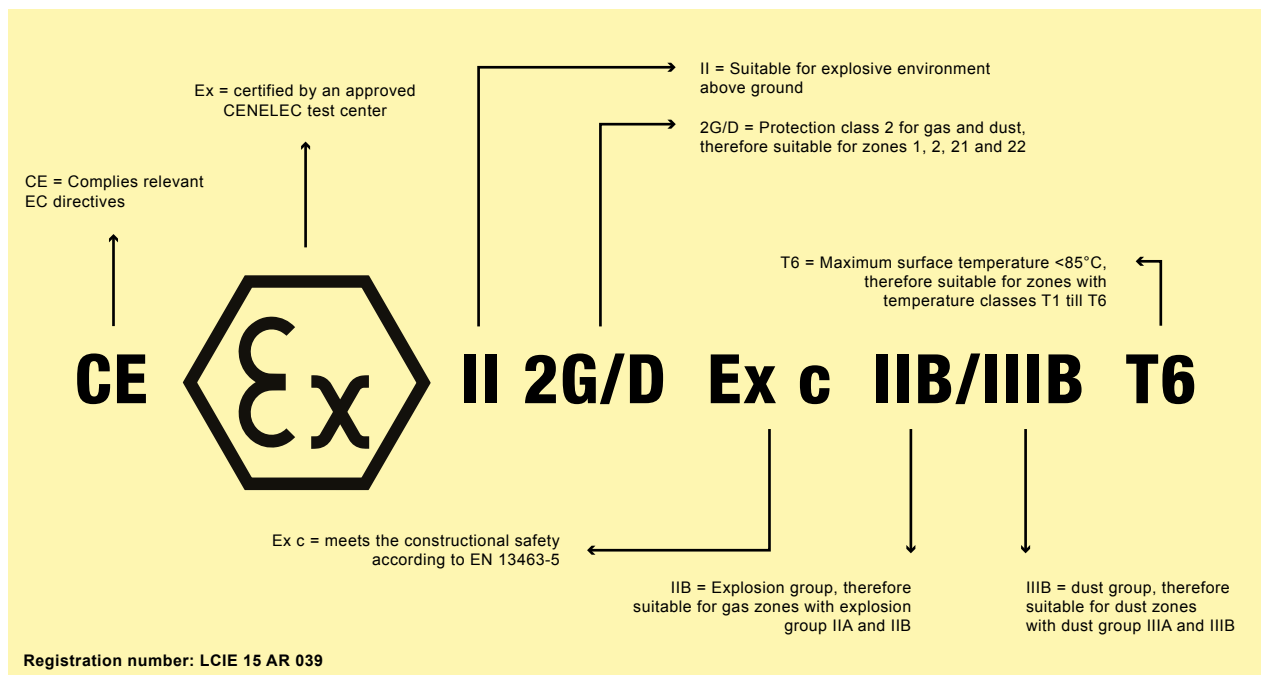

If you have an ATEX certified torque wrench please note the following:

- Socket must at all times be secured using the locking pin and o-ring
- The reaction arm must be at all times be secured using the retaining ring
- There should be at all times a earth connection with the work piece.
- Always use a Braided Antistatic Hose ( $R < 1M\Omega$ ).

## 8. Warranty

### 8.1 New tool warranty

Any new tool branded with the RAD name and purchased from RAD Torque Systems B.V., or through one of its authorized distributors or agents, is warranted to the original purchaser against defects in materials and workmanship for a period of twelve (12) month from the date of delivery to the end user. This guarantee is valid until fifteen (15) months after the original calibration date.

Furthermore, the warranty conditions determine that no warranty applies if:

1. The defect, wholly or partly, is due to unusual, inappropriate, improper or careless use of the product;
2. The defect, wholly or partly, is due to unusual, is due to normal wear and tear or lack of proper maintenance;
3. The defect, wholly or partly, is due to unusual, is due to installation, assembly, modification and / or repair by the customer or by third parties;
4. The product altered, modified, used or processed is;
5. The product is transferred to a third party;
6. RAD Torque Systems B.V. has obtained the product, wholly or partly, from a third party, and RAD Torque Systems B.V. can not claim compensation under warranty;
7. RAD Torque Systems B.V. in manufacturing of the product raw materials, and suchlike has used on the instructions of the customer;
8. The product has a small deviation in it's quality, finishing, size, composition and suchlike, which is not unusual in the industry or if the defect was technically unavoidable;
9. The customer has not fulfilled all obligations under the agreement promptly and correctly towards RAD Torque Systems B.V..

### 8.2 Repaired tool warranty

After the warranty has expired a three (3) month warranty applies to the original purchaser against defective in material or workmanship or both from the date of repair.

To qualify for the above mentioned warranties, written notice to RAD Torque Systems B.V. must be given immediately upon discovery of such defect, at which time RAD Torque Systems. will issue an authorization to return the tool. Freight costs must be paid in advance. When returning a tool, the reaction arm/s being used with the tool must also be returned.

For the latest warranty terms, please see our sales conditions on our website [www.radtorque.nl](http://www.radtorque.nl).

## 9. Contact

### **RAD Torque Systems B.V.**

Zuidergracht 19

3763 LS Soest

Telephone: 035-5882450

E-mail: [info@radtorque.nl](mailto:info@radtorque.nl)

Website: [www.radtorque.nl](http://www.radtorque.nl)



**MINING**  
**OIL & GAS**  
**WINDPOWER**  
**AEROSPACE**  
**PETROCHEMICAL**  
**MANUFACTURING**  
**COMMERCIAL VEHICLE INDUSTRY**

**MASTER DISTRIBUTOR FOR EUROPE, MIDDLE EAST AND NORTH AFRICA:**

**RAD TORQUE SYSTEMS B.V.**  
**ZUIDERGRACHT 19**  
**3763 LS SOEST**  
**THE NETHERLANDS**

**PHONE.: +31 (0)35 - 5882450**

**E-MAIL: INFO@RADTORQUE.NL**

**SALES@RADTORQUE.NL**

**TECHSUPPORT@RADTORQUE.NL**

**WWW.RADTORQUE.NL**